



MERCATOR

NAVIGATING SUCCESS

Bain Marie Wet Heat Food Warmer

Instruction Manual



**PLEASE READ THE MANUAL THOROUGHLY PRIOR TO
EQUIPMENT SET-UP, OPERATION, AND MAINTENANCE.**

Technical Data:

SPECIFICATIONS	
Capacity:	24L
Voltage:	110V AC 60Hz 1200W

Operating and Maintenance:

1. Plug unit into correct electrical socket.
2. Use with WET HEAT ONLY. Add water to the inside of the stainless steel food warmer to the fill line. Never overfill with water and remove any excess water immediately.
3. Always operate the appliance at the lowest setting required to maintain the correct serving temperature. The temperature control should normally be set between 1-2 but can be set between 3-5 to hold at high temperature.
4. An indicator light will illuminate when the unit is turned on. Turn the dial to 0 to switch off.
 - Unplug from the wall when not in use.
5. Never move or carry the appliance when unit is switched on, or while the unit is filled with water. Never move or carry the appliance while containing hot food or other product.
6. Spilled soup or food should be removed immediately from all exterior surfaces. The stainless steel units should be wiped over with a damp soapy cloth.
7. Ensure unit is unplugged when not in use, when filling, and when being cleaned.
8. The appliance must not be cleaned with a high pressure jet.

IMPORTANT

NEVER IMMERSE THE APPLIANCE IN WATER AS DAMAGE TO THE UNIT WILL RESULT AND THE WARRANTY WILL BE VOIDED.

WARNING: THIS APPLIANCE MUST BE GROUNDED.

DO NOT OPERATE THE APPLIANCE EMPTY.

CHILDREN AND ANYONE WITHOUT PROPER TRAINING AND OPERATING EXPERIENCE ARE PROHIBITED FROM USING THE APPLIANCE. CAUTION MUST BE FOLLOWED TO ENSURE CHILDREN DO NOT TOUCH OR PLAY WITH THE APPLIANCE.



MERCATOR
NAVIGATING SUCCESS

©2025 MERCATOR